



INSTALLATION AND MAINTENANCE

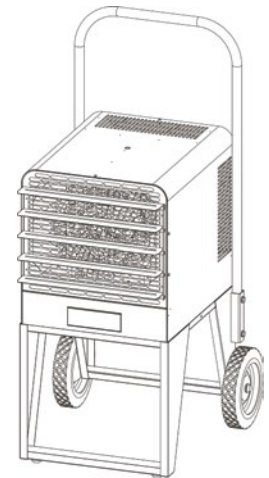

PKB **PLATINUM^X** Series Electronic Portable Heater

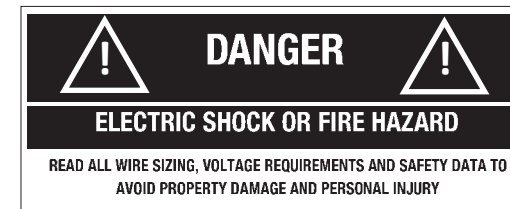

WARNING

READ CAREFULLY - Use the heater only as described in this manual. Any other use is not recommended and could result in fire, electric shock, and personal injury. Following these instructions will prevent difficulties that might occur during the installation and use of the heater. Please study the instructions first, as they may save considerable time and trouble during use addition to providing important safety information. Make sure to save these instructions for future use.

NEVER LEAVE HEATER UNATTENDED WHILE CONNECTED TO A POWER SOURCE

Read all instructions before using this heater

1. **WARNING:** This heater is hot when in use. To avoid burns, do not let bare skin touch hot surfaces. Keep combustible materials, such as furniture, pillows, bedding, papers, clothes, etc. and curtains at least 3 feet (0.9m) from the front of the heater and keep them away from the sides and rear.
2. Extreme caution is necessary when heater is used by or near children or invalids and whenever the heater is left operating and unattended.
3. Always unplug heater when not in use.
4. **WARNING:** Do not operate heater with damaged cord or plug, after it malfunctions, has been dropped, or damaged in any manner. Discard heater or return to authorized service facility for examination and/or repair.
5. **WARNING:** Do not use outdoors.
6. This heater is not intended for use in bathrooms, laundry and similar indoor areas. Never locate heater where it can fall into a bathtub or other water container.
7. **WARNING:** Do not run cord under carpeting. Do not cover cord with throw rugs, runners or similar coverings. Do not route cord under furniture or appliances. Arrange cord away from traffic area and where it will not be tripped over.
8. To disconnect heater, turn controls to off, then remove plug from outlet.
9. Connect to properly grounded outlets only.
10. **WARNING:** Do not insert or allow foreign objects to enter any ventilation or exhaust opening as this may cause an electric shock or fire, or damage the heater.
11. **WARNING:** To prevent a possible fire, do not block air intakes or exhaust in any manner.
12. **WARNING:** A heater has hot and arcing or sparking parts inside. Do not use it in areas where gasoline, paint, or flammable vapors or liquids are used or stored.
13. Use this heater only as described in this manual. Any other use not recommended by the manufacturer may cause fire, electric shock, or injury to persons.
14. Always plug heater into wall outlet or receptacle. Never use with extension cord or relocatable power tap, or power strip.
15. **WARNING:** THIS UNIT SHALL NOT BE USED WITHOUT A DUCT.
16. **WARNING:** Hyperthermia can result in death. Symptoms of hyperthermia include high body temperature, headache, nausea, vomiting, tiredness, dizziness, fainting, and rapid pulse. If you begin to experience symptoms related to hyperthermia, turn off the heater and seek medical attention.
17. To avoid excessive room temperatures which can cause hyperthermia: DO NOT leave product running unattended in a confined space around infants, or individuals with reduced physical, sensory, or mental capabilities.



Smart Heating Solutions

PKB PLATINUMX SO WIRE SIZE

MODEL #	DESCRIPTION	KW	PHASE	VOLTS	AMPS	SO CORD SIZE
PKB2007-1-P	PKB 208V 7.5KW 1-PH	7.5	1	208	36.1	8/3
PKB2007-3-P	PKB 208V 7.5KW 3-PH	7.5	3	208	20.8	10/4
PKB2010-1-P	PKB 208V 10KW 1-PH	10	1	208	48.0	6/3
PKB2010-3-P	PKB 208V 10KW 3-PH	10	3	208	27.7	8/4
PKB2015-1-P-FB	PKB 208V 15KW 1-PH	15	1	208	72.1	2/3
PKB2015-3-P	PKB 208V 15KW 3-PH	15	3	208	36.1	6/4
PKB2020-3-P-FB	PKB 208V 20KW 3-PH	20	3	208	55.6	4/3
PKB2407-1-P	PKB 240/208V 7.5/5.63KW 1-PH	7.5/5.63	1	240/208	31.3	8/3
PKB2407-3-P	PKB 240/208V 7.5/5.63KW 3-PH	7.5/5.63	3	240/208	18.1	12/4
PKB2410-1-P	PKB 240/208V 10/7.5KW 1-PH	10/7.5	1	240/208	41.7	6/3
PKB2410-3-P	PKB 240/208V 10/7.5KW 3-PH	10/7.5	3	240/208	24.1	10/4
PKB2412-1-P-FB	PKB 240/208V 12/9KW 1-PH	12.5/9.4	1	240/208	52.1	6/3
PKB2412-3-P	PKB 240/208V 12/9KW 3-PH	12.5/9.4	3	240/208	30.1	8/4
PKB2415-1-P-FB	PKB 240/208V 15/11.25KW 1-PH	15/11.25	1	240/208	62.5	4/3
PKB2415-3-P	PKB 240/208V 15/11.25KW 3-PH	15/11.25	3	240/208	36.1	6/4
PKB2420-3-P-FB	PKB 240/208V 20/15KW 3-PH	20/15	3	240/208	48.2	4/4
PKB2425-3-P-FB	PKB 240/208V 25/18.75KW 3-PH	25/18.75	3	240/208	60.2	2/4
PKB2430-3-P-FB	PKB 240/208V 30/22.5KW 3-PH	30/22.5	3	240/208	72.3	2/4
PKB4807-1-P	PKB 480V 7.5KW 1-PH	7.5	1	480	15.6	14/3
PKB4807-3-P	PKB 480V 7.5KW 3-PH	7.5	3	480	9.0	16/4
PKB4810-1-P	PKB 480V 10KW 1-PH	10	1	480	20.8	12/3
PKB4810-3-P	PKB 480V 10KW 3-PH	10	3	480	12	14/4
PKB4812-1-P	PKB 480V 12KW 1-PH	12.5	1	480	26.0	10/3
PKB4812-3-P	PKB 480V 12KW 3-PH	12.5	3	480	15.1	12/4
PKB4815-1-P	PKB 480V 15KW 1-PH	15	1	480	31.3	8/3
PKB4815-3-P	PKB 480V 15KW 3-PH	15	3	480	18.1	12/4
PKB4820-3-P	PKB 480V 20KW 3-PH	20	3	480	24.1	10/4
PKB4825-3-P	PKB 480V 25KW 3-PH	25	3	480	30.1	8/4
PKB4830-3-P	PKB 480V 30KW 3-PH	30	3	480	36.1	6/4


CLEANING INSTRUCTIONS

Before cleaning this heater, heating element must be cool.


1. Before removing grille, turn the electrical power OFF by unplugging it. If not, electricity may still be flowing to the heater. If you are uncomfortable working with electrical appliances consult a qualified electrician. Once power is off completely, proceed to the next step.
2. Remove 4 Phillips head screws located behind the louvers in the corners of the louver housing. Wipe housing with soft cloth or brush.
3. Using a hair dryer or vacuum on blow cy-

cle, blow debris back through the element. Do not touch element. Vacuum lose debris without touching the elements.

4. Replace louver housing and secure with screws.
5. To clean the fan and motor remove the safety grill from the rear of the heater. This provides access to the fan and motor. Wash Grill with hot soapy water and dry immediately
6. Wipe the fan and motor with a soft cloth or brush.
7. Replace safety grill & plug the unit back in.

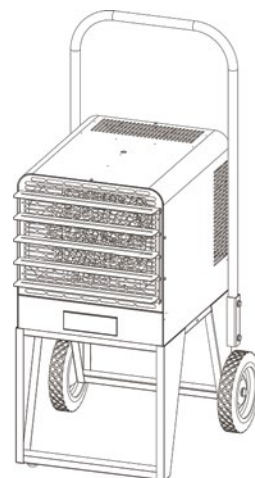

PLATINUMX OPEATING INSTRUCTIONS

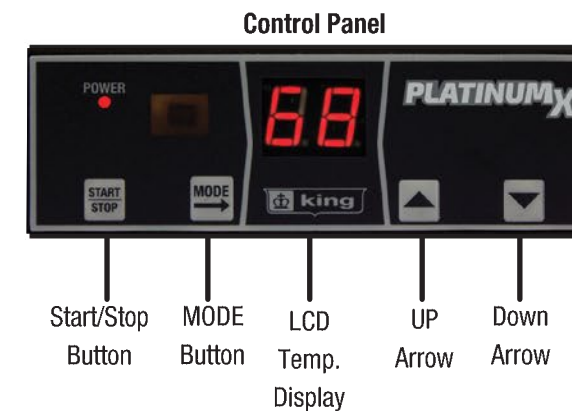

Infrared Remote Control

Operating Instructions

1. Push the button, the heater will come on and heat to the default setting of 77°F.
2. Once the room temperature reaches the set point, the heater will stop running.
3. In normal operation the display will show the current room temperature.

Room Temperature Selection

- During operation, push or arrow buttons to set the temperature from 45°F-99°F, Hold down the UP or DOWN arrow to speed up the selection process. The LCD will go back to display room temperature after 5 seconds.

Timer Mode Selection

- During operation, press the button 1 time, the display window will show the timer mode setup. Push the UP or DOWN arrows to set the timer from 1 hour—9 hours.

Fan Only Mode Selection

Lower thermostat temperature below the room temp. prior to Fan Only selection.

- During operation, press the button 2 times, the display window will show H (Heat Mode) or F (Fan Only Mode). Push to enter Fan Only mode. Push to enter Heat Mode.

Factory Reset

- During operation, press the and HOLD the button for 5 seconds to reset to the factory settings.

Sensor Error Code

- During operation, if the display shows E1 that indicates an issue with the sensor. The sensor connector may have come loose from the control board. Open the wiring compartment and reseal the sensor onto the control board. Or it may be possible the sensor needs to be replaced. Contact customer support for assistance.

